


# “How to” VFR Circuit Joins v.2 updated 8/11/2009

Joining a VFR Circuit from elsewhere confuses many at first but if you learn the basic joins first (labelled in blue) before learning the Standard Overhead (in red) you will soon pick it up

**Blue arrows are AT circuit height**  
**Red arrows are ABOVE circuit height**  
(typically 1000' above, but not always)

**Standard Overhead Join**  
Fly the RED arrows until descending dead side

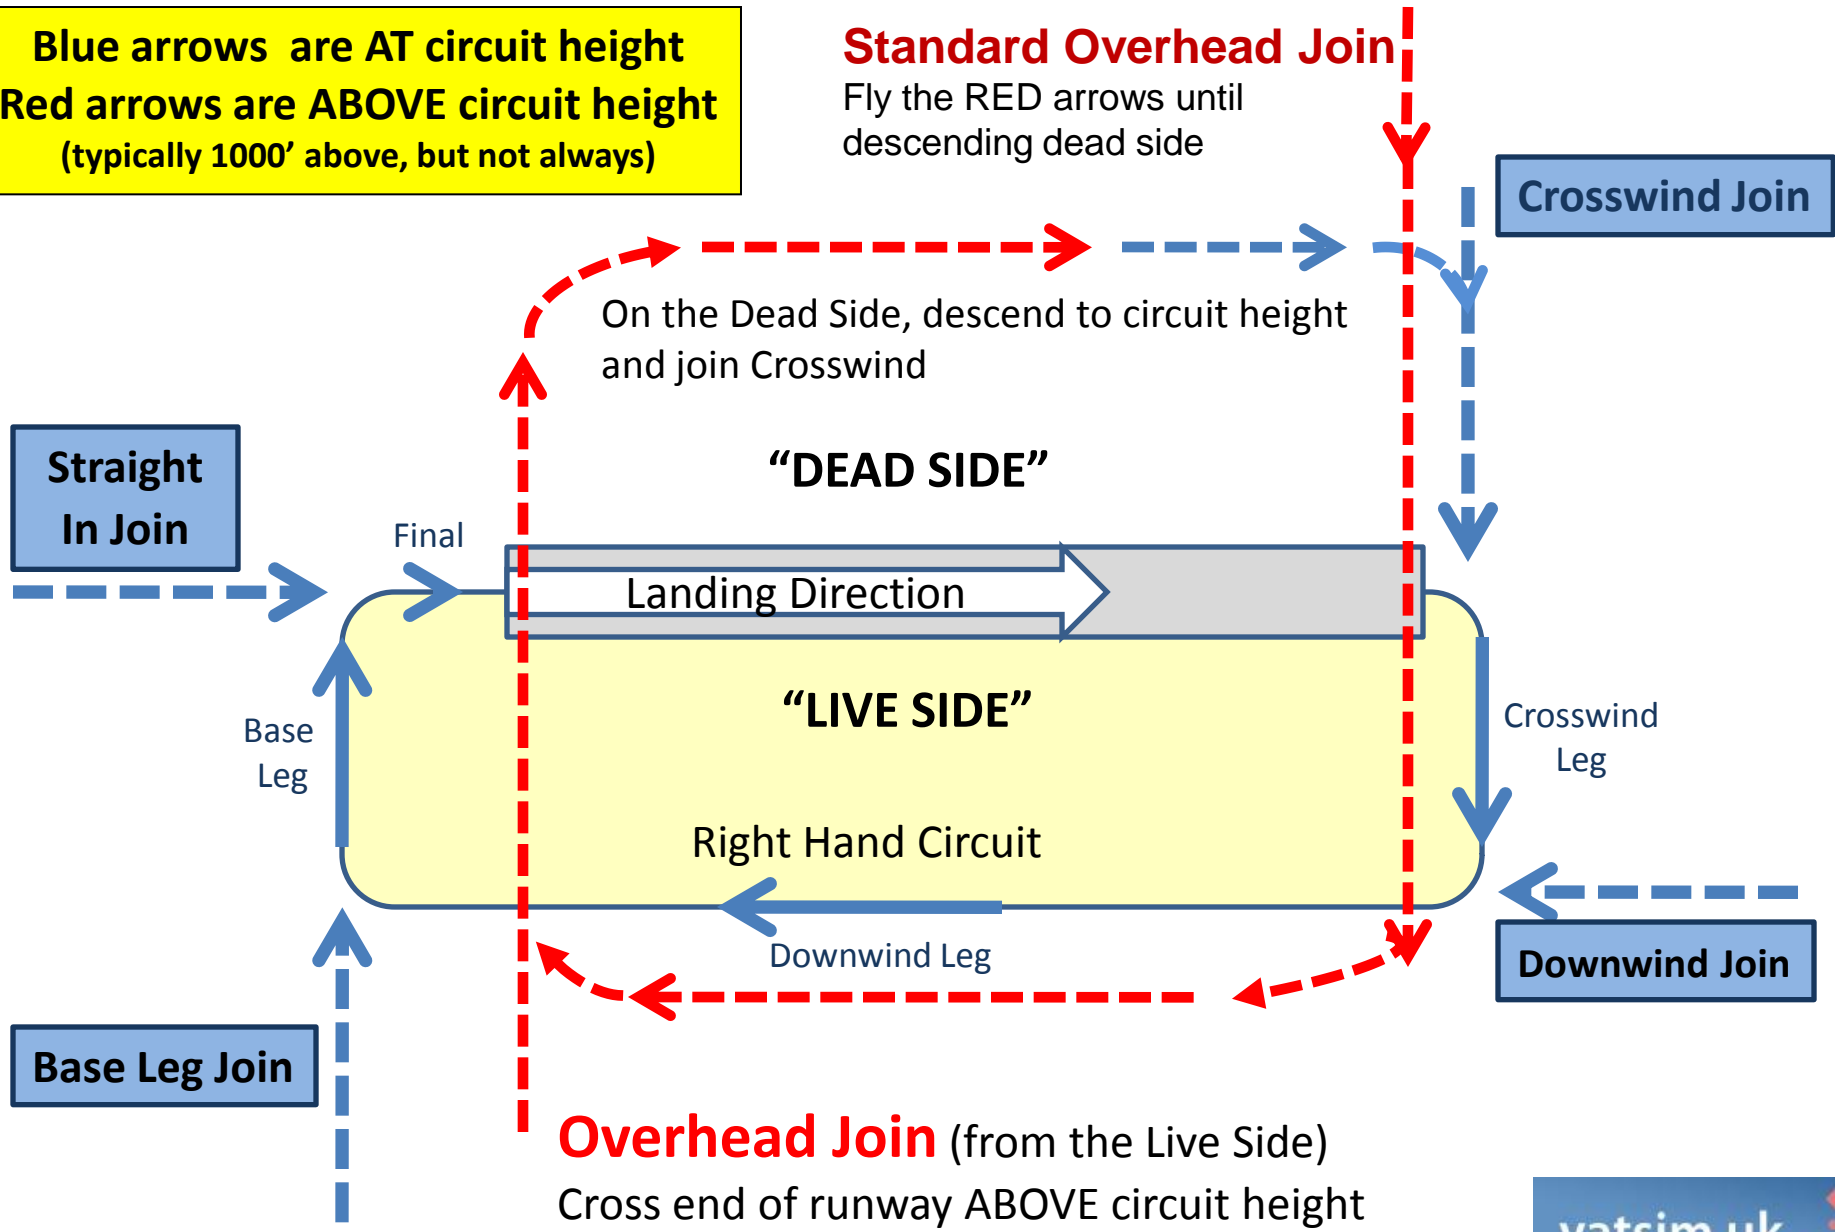

**Overhead Join** (from the Live Side)  
Cross end of runway ABOVE circuit height