


Usually used by light aircraft flying IFR outside controlled airspace. VFR don't have to adhere to this but it can be sensible to do so (there might be an IFR coming the other way!)

These are based on FLIGHT LEVELS above 3000 feet. 3000' is the default Transition Altitude outside CAS so passing 3000' set Standard Pressure 1013mb (29.92 inches)

"How to" The Quadrantal Rule IFR Outside Controlled Airspace v.3 updated 19/12/2009

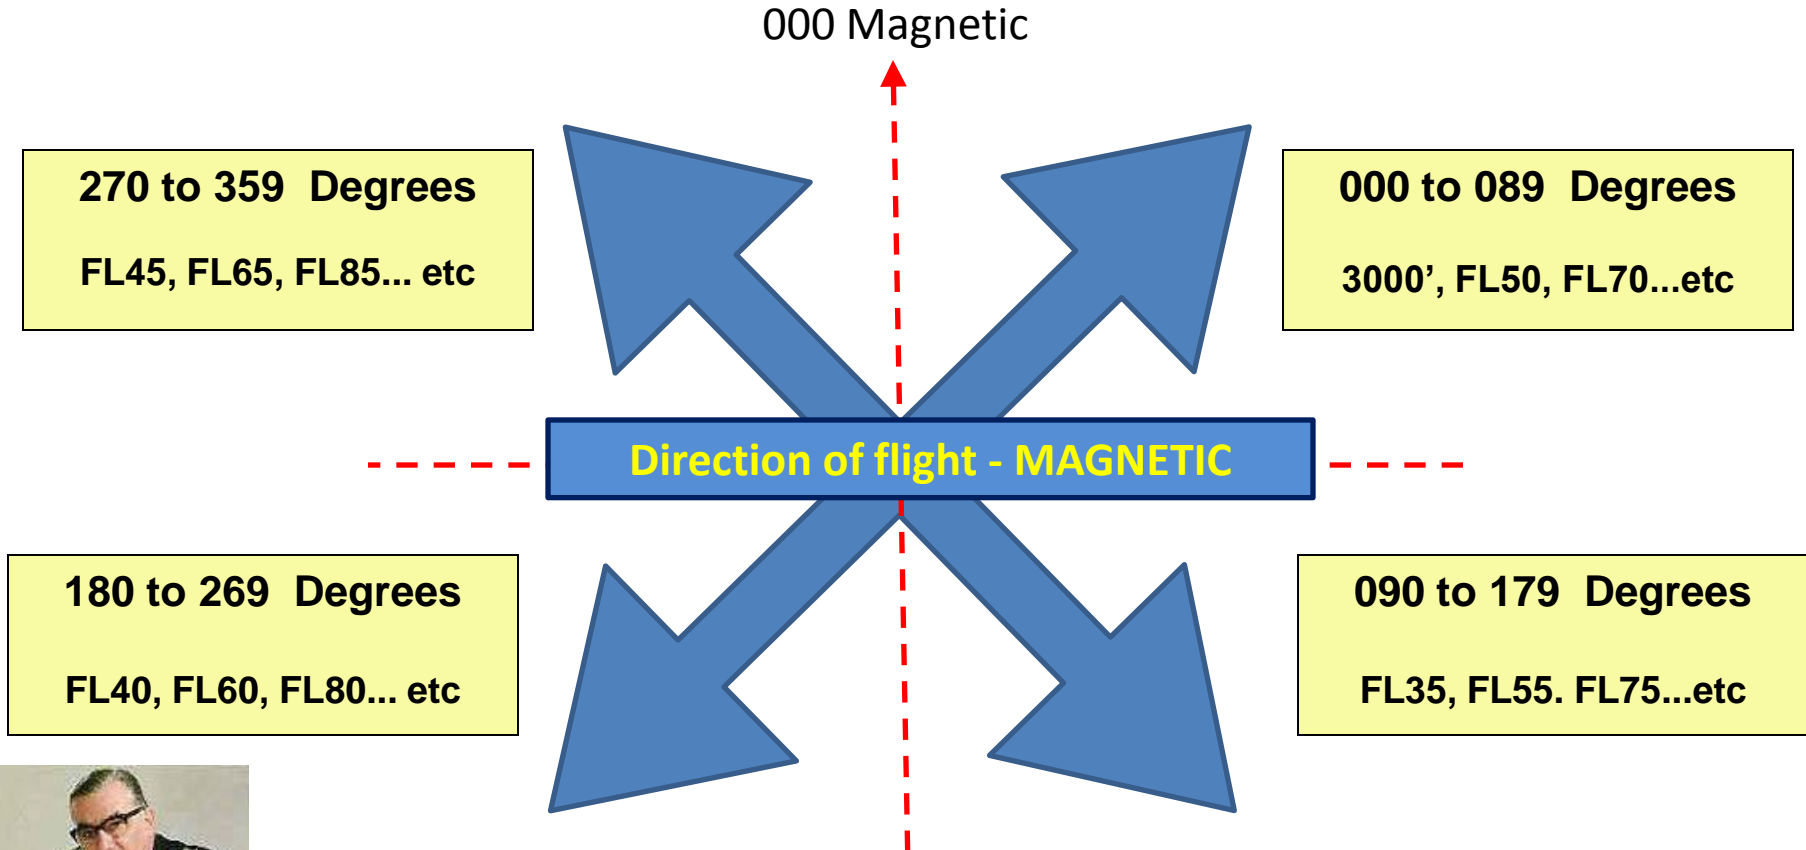

I am convinced this is a major contribution to flight safety

Once one enters Controlled Airspace then the Semicircular Rule supersedes this (see "How To" Plan a Flight Level)